

NITECORE®

KEEP INNOVATING

MH12GTS

Ultra Compact
Dual-Fuel Searchlight

- Maximum output of 1,800 lumens
- USB Charging
- Blue power indicator



Warranty Service

All NITECORE® products are warranted for quality. Any DOA / defective product can be exchanged for a replacement through a local distributor/dealer within 15 days of purchase. After that, all defective / malfunctioning NITECORE® products can be repaired free of charge within 60 months from the date of purchase. Beyond 60 months, a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replacement parts.

- The warranty will be nullified if
- the product(s) is/are broken down, reconstructed and/or modified by unauthorized parties;
 - the product(s) is/are damaged due to improper use; (e.g. reversed polarity installation)
 - the product(s) is/are damaged due to battery leakage.

For the latest information on NITECORE® products and services, please contact a local NITECORE® distributor or send an email to service@nitecore.com

※ All images, text and statements specified herein this user manual are for reference purpose only. Should any discrepancy occur between this manual and information specified on www.nitecore.com, Sysmax Innovations Co., Ltd. reserves the rights to interpret and amend the content of this document at any time without prior notice.

SYSMAX Innovations Co., Ltd.

TEL: +86-20-83862000
FAX: +86-20-83882723
E-mail: info@nitecore.com
Web: www.nitecore.com
Address: Rm 2601-06, Central Tower, No.5 Xiancun Road, Tianhe District, Guangzhou,510623, Guangdong, China



Please find us on facebook : NITECORE Flashlight
Thanks for purchasing NITECORE!

MH050312GTS20

Features

- Utilizes CREE XHP35 HD LED, with a maximum output of 1,800 lumens
- Maximum peak beam intensity of 12,760cd and maximum throw of 226 meters
- An optical system combined with crystal coating and "Precision Digital Optics Technology" (PDOT)
- High efficiency constant circuit provides stable output up to 350 hours
- The metal side switch controls 5 brightness levels and 3 special modes
- STROBE Mode of randomly changing frequencies for stronger dizzying effects
- A power indicator beneath the side switch indicates the remaining battery power
- The power indicator can also display the battery voltage (±0.1V)
- Built-in Li-ion battery charging circuit with a Micro-USB port
- NITECORE 18650 rechargeable Li-ion battery (NL1835HP 3,500mAh) included
- Rigid double layer tube design
- Incorporated Advanced Temperature Regulation (ATR) module (Patent No. ZL201510534543.6)
- Electronic reverse polarity protection
- Optical lenses with double-sided scratch resistant coating
- Constructed from aero grade aluminum alloy
- HA III military grade hard-anodized finish
- Waterproof in accordance with IPX8 (2 meters submersible)
- Impact resistant to 1 meter
- Tail stand capability

Specifications

Length: 144mm (5.67")
Head Diameter: 25.4mm (1")
Tail Diameter: 26mm (1.02")
Weight: 99.5g (3.51oz)

Accessories

NITECORE 18650 Rechargeable Li-ion Battery (NL1835HP 3,500mAh),
USB Charging Cable, Holster, Clip, Tactical Ring, Lanyard, Spare O-ring

Battery Options

	Type	Nominal Voltage	Compatibility
NITECORE NL1835HP (3500mAh)	18650	3.6V	Y (Recommended)
IMR 18650 High-Drain Rechargeable Li-ion Battery	IMR18650	3.6V/3.7V	Y (Recommended)
18650 Rechargeable Li-ion Battery (Output over 8A)	18650	3.6V/3.7V	Y (Compatible)
Primary Lithium Battery	CR123	3V	Y (Compatible)
Rechargeable Li-ion Battery	RCR123	3.6V/3.7V	Y (Compatible)
18650 Rechargeable Li-ion Battery (Output below 8A)	18650	3.6V/3.7V	N (Incompatible)

Technical Data

RL STANDARD	TURBO	HIGH	MID	LOW	ULTRALOW	STROBE	BEACON	SOS
	1800 Lumens	900 Lumens	240 Lumens	70 Lumens	1 Lumens	1800 Lumens	1800 Lumens	1800 Lumens
	*30min	2h15min	5h45min	19h	250h	—	—	—
	226m	152m	86m	48m	4m	—	—	—
	12760cd	5780cd	1880cd	570cd	5cd	—	—	—
	1m (Impact Resistance)							
	IPX8, 2m (Waterproof and Submersible)							

Notes: The stated data is measured in accordance with the international flashlight testing standards ANSI/NEMA FL1, using 1 x 18650 Li-ion battery (3500mAh) under laboratory conditions. The data may vary in real world use due to different battery usage or environmental conditions.
* The runtime for TURBO mode is tested without the temperature regulation.
* TURBO Availability: The TURBO level is only accessible when using an 18650 rechargeable Li-ion battery of an output over 8A or an IMR 18650 high-drain rechargeable Li-ion battery. It is inaccessible when using CR123/RCR123 batteries.


Battery Installation

Insert the battery(s) as illustrated and screw to tighten the tail cap.

Note: After the battery insertion, the power indicator will flash to indicate the remaining battery power. Please refer to the "Power Indication" section of this manual for more details.

Warnings:

- Ensure the battery(s) is/are inserted with the positive end towards the head. The product will not work if the battery(s) is/are incorrectly inserted.
- CAUTION! Possible dangerous radiation! Don't look into the light! Maybe dangerous for your eyes.
- When the power level is low using an IMR 18650 Li-ion battery, please stop using the product and remove the battery to prevent damage to the battery.
- When the product is kept in a backpack or left unused for prolonged time, please remove all batteries to prevent accidental activation or battery leakage.
- DO NOT submerge the light into any liquid when it is hot. Doing so may cause irreparable damage to the light due to the difference of air pressure inside and outside of the tube.

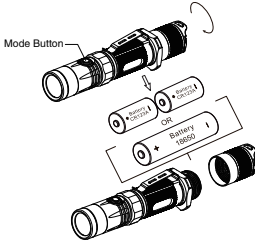

(English) MH12GTS

Tactical Momentary Illumination

Half press and hold the Tail Switch to turn on the light momentarily. Release to turn it off.

On / Off

On: When the light is off, press the Tail Switch until a click sound is heard to turn on the light.
Off: When the light is on, press the Tail Switch until a click sound is heard to turn off the light.
Note: MH12GTS has mode memory. When reactivated, the flashlight will automatically access the previous memorized brightness level or STROBE mode (SOS and BEACON excluded).

Brightness Levels

When the light is on, short press the mode button to cycle through the following brightness levels: ULTRALOW – LOW – MID – HIGH – TURBO.

Direct Access to ULTRALOW

When the light is off, press and hold the Mode Button, then click the Tail Switch and release both to access ULTRALOW. (This access does not have the mode memory.)

Momentary Access to TURBO


When the light is on, press and hold the Mode Button to access TURBO. Release to return to the previous memorized brightness level.

Special Mode (STROBE / BEACON / SOS)

Access: When the light is on, double press the Mode Button to access STROBE.
Switch: When STROBE is on, long press the Mode Button to cycle through the following special modes: BEACON – SOS – STROBE.
Exit: When one of the special modes is on, short press the Mode Button to exit special modes and access the previous memorized brightness level; or click the Tail Switch to exit special modes and turn off the light.


Charging Function

- MH12GTS is equipped with an intelligent charging system. As illustrated, screw to fully tighten the tail cap after inserting the battery, and then use the USB cable to connect an external power supply (e.g. a USB adaptor, a computer or other USB charging devices) to the Micro-USB port located on the tail cap to begin the charging process.
- When the charging status is normal, the charging indicator will flash slowly to inform the user.
 - When the battery is fully charged, MH12GTS will cease the charging process and the charging indicator will become steadily turned on to inform the user.
 - When the charging status is abnormal (e.g. the battery is broken/inserted incorrectly), MH12GTS will cease the charging process and the charging indicator will flash quickly to inform the user.
 - The charging time for an 18650 Li-ion battery is approx. 8 hours.

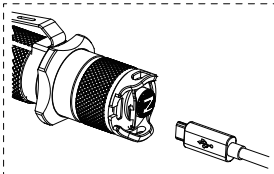

Power Indication

- When the battery is inserted, the power indicator beneath the side switch will flash to show the battery voltage (±0.1V). For example, when the battery voltage is at 4.2V, the power indicator will flash 4 times followed by a one second pause and 2 more flashes. Different voltages represent the corresponding remaining battery power levels:

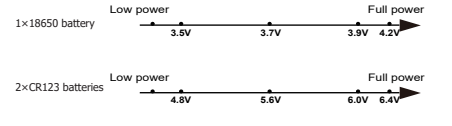

Note: when using two CR123/RCR123 in series, the indicator will show the average voltage between the two batteries.

- When the Mode Button is pressed when the light is off, the power indicator will flash to indicate the remaining power of the batteries:
 - Flashing three times indicates that the power is above 50%;
 - Flashing twice indicates that the power is below 50%;
 - Flashing once indicates that the power is below 10%;
- When the light is on and the power level is close to 50%, the power indicator will flash every 2 seconds to inform the user. When the light is on and the power is close to depleted, the power indicator will flash quickly and continuously to inform the user.

ATR

With incorporated Advanced Temperature Regulation module, MH12GTS regulates its output and adapts to the ambient environment, maintaining optimal performance.

Changing Batteries

The batteries should be replaced when the power indicator flashes quickly and continuously and the output appears to be dim or the flashlight becomes unresponsive due to low power.

Maintenance

Every 6 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

(Español) MH12GTS

Tactical Momentary Illumination

Half press and hold the Tail Switch to turn on the light momentarily. Release to turn it off.

On / Off

On: When the light is off, press the Tail Switch until a click sound is heard to turn on the light.
Off: When the light is on, press the Tail Switch until a click sound is heard to turn off the light.
Note: MH12GTS has mode memory. When reactivated, the flashlight will automatically access the previous memorized brightness level or STROBE mode (SOS and BEACON excluded).

Brightness Levels

When the light is on, short press the mode button to cycle through the following brightness levels: ULTRALOW – LOW – MID – HIGH – TURBO.

Direct Access to ULTRALOW

When the light is off, press and hold the Mode Button, then click the Tail Switch and release both to access ULTRALOW. (This access does not have the mode memory.)

Momentary Access to TURBO


When the light is on, press and hold the Mode Button to access TURBO. Release to return to the previous memorized brightness level.

Special Mode (STROBE / BEACON / SOS)

Access: When the light is on, double press the Mode Button to access STROBE.
Switch: When STROBE is on, long press the Mode Button to cycle through the following special modes: BEACON – SOS – STROBE.
Exit: When one of the special modes is on, short press the Mode Button to exit special modes and access the previous memorized brightness level; or click the Tail Switch to exit special modes and turn off the light.


Función de carga

- La MH12GTS está equipada con un Sistema inteligente de carga. Como se muestra, atornille hasta apretar por completo la tapa trasera después de insertar la batería, luego utilice el cable USB para conectar una fuente de alimentación externa (por ejemplo, un adaptador USB, una computadora o algún otro dispositivo de carga) al puerto Micro-USB localizado en la tapa trasera para comenzar el proceso de carga.
- Cuando el proceso de carga es normal, el indicador de carga parpadeará lentamente para informar al usuario.
 - Cuando la batería está completamente cargada, la MH12GTS detendrá el proceso de carga y el indicador de carga permanecerá encendido para informar al usuario.
 - Cuando el proceso de carga es anormal, (por ejemplo, la batería está rotada/insertada incorrectamente), la MH12GTS detendrá el proceso de carga y el indicador de carga parpadeará rápidamente para informar al usuario.
 - El tiempo de carga para una batería Li-Ion 18650 es de aproximadamente 8 horas.

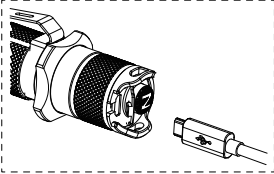

Power Indication

- When the battery is inserted, the power indicator beneath the side switch will flash to show the battery voltage (±0.1V). For example, when the battery voltage is at 4.2V, the power indicator will flash 4 times followed by a one second pause and 2 more flashes. Different voltages represent the corresponding remaining battery power levels:

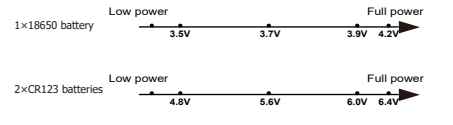

Note: when using two CR123/RCR123 in series, the indicator will show the average voltage between the two batteries.

- When the Mode Button is pressed when the light is off, the power indicator will flash to indicate the remaining power of the batteries:
 - Flashing three times indicates that the power is above 50%;
 - Flashing twice indicates that the power is below 50%;
 - Flashing once indicates that the power is below 10%;
- When the light is on and the power level is close to 50%, the power indicator will flash every 2 seconds to inform the user. When the light is on and the power is close to depleted, the power indicator will flash quickly and continuously to inform the user.

ATR

With incorporated Advanced Temperature Regulation module, MH12GTS regulates its output and adapts to the ambient environment, maintaining optimal performance.

Changing Batteries

The batteries should be replaced when the power indicator flashes quickly and continuously and the output appears to be dim or the flashlight becomes unresponsive due to low power.

Maintenance

Every 6 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

(Deutsch) MH12GTS

ACHTUNG! Möglicherweise gefährliche optische Strahlung! Bei Betrieb nicht direkt in das Licht blicken. Kann für die Augen gefährlich sein.

Momentlicht

Drücken Sie den Schalter der Heckkappe halb durch, um das Licht einzuschalten. Zum Ausschalten die Taste einfach loslassen.

Ein-/Ausschalten

Einschalten: Drücken Sie den Heckschalter ganz durch, bis Sie ein "Click" hören.
Ausschalten: Drücken Sie den Heckschalter erneut ganz durch, bis Sie den "Click" hören.
Hinweis: Die MH12GTS speichert die zuletzt genutzte Helligkeitsstufe sowie den Strobe-Mode zum nächsten Einschalten (SOS- und Location-Beacon-Mode werden nicht gespeichert).

Helligkeitsstufen

Bei eingeschalteter MH12GTS drücken Sie wiederholt den Mode-Schalter, um nacheinander fortlaufend durch die Helligkeitsstufen "Ultralow" - "Low" - "Mid" - "High" - "Turbo" zu schalten.

Direkter Zugang zu "Ultralow"

Wenn das Licht aus ist, drücken und halten Sie den Mode-Schalter. Dann klicken Sie auf den Heckschalter und lassen beide Schalter los, um auf "Ultralow" zuzugreifen. (Bei diesem Zugriff wird der Mode nicht gespeichert.)

Momentlicht in "Turbo"


Wenn das Licht an ist, drücken und halten Sie den Mode-Schalter, um auf "Turbo" zuzugreifen. Wenn Sie den Mode-Schalter loslassen kehren Sie zur vorher genutzten Helligkeitsstufe zurück.

Spezial-Modi (Strobe / Location-Beacon/ SOS)

Klicken Sie zweimal kurz nacheinander auf den Mode-Schalter, um in den Strobe-Mode zu schalten. Im Strobe-Mode drücken und halten Sie den Mode-Schalter, um nacheinander fortlaufend durch die Modi "Location-Beacon" - SOS" und "Strobe" zu schalten. Um den Spezial-Mode zu verlassen und zur zuletzt genutzten Helligkeitsstufe zurückzukehren, drücken Sie einfach kurz den Mode-Schalter oder betätigen Sie den Heckschalter, um das Licht auszuschalten.


Ladefunktion

- MH12GTS ist mit einem intelligenten Ladesystem ausgestattet. Schrauben Sie die Endkappe nach dem Einlegen des/der Akkus fest und schließen Sie dann - wie abgebildet - ein externes Netzteil (z. B. einen USB-Adapter, einen Computer oder andere USB-Ladegeräte) über das USB-Kabel an den Micro-USB-Anschluss in der Endkappe an, um den Ladevorgang zu beginnen.
- Wenn der Ladezustand normal ist, blinkt die Ladeanzeige langsam.
 - Wenn der Akku vollständig geladen ist, beendet die MH12GTS den Ladevorgang und die Ladeanzeige leuchtet stetig.
 - Wenn der Ladezustand unnormal ist (z. B. wenn der Akku defekt oder falsch eingelegt ist), beendet die MH12GTS den Ladevorgang und die Ladeanzeige blinkt schnell.
 - Die Ladezeit für einen 18650 Lithium-Ionen-Akku beträgt ca. 8 Stunden.

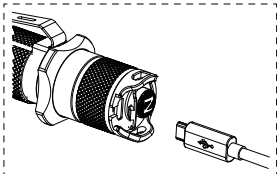

Leistungsanzeige

- Wenn der Akku eingelegt ist, blinkt die Betriebsanzeige unter dem seitlichen Schalter, um die Akkuspannung (±0.1 V) anzuzeigen. Wenn die Spannung beispielsweise 4.2 V beträgt, blinkt die Betriebsanzeige viermal, gefolgt von einer Pause von einer Sekunde und zwei weiteren Blinksignalen. Unterschiedliche Spannungen repräsentieren die entsprechenden verbleibenden Leistungspegel:

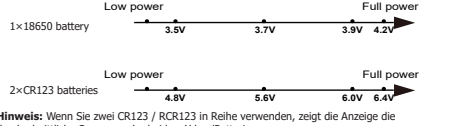

Hinweis: Wenn Sie zwei CR123 / RCR123 in Reihe verwenden, zeigt die Anzeige die durchschnittliche Spannung der beiden Akkus/Batterien an.

- Wenn der Mode-Schalter bei ausgeschaltetem Licht gedrückt wird, blinkt die Betriebsanzeige, um die verbleibende Batterieleistung anzuzeigen:
 - Dreimaliges Blinken zeigt an, dass die Leistung über 50% liegt;
 - Zweimaliges Blinken zeigt an, dass die Leistung unter 50% liegt;
 - Einmaliges Blinken zeigt an, dass die Leistung unter 10% liegt.
- Wenn das Licht an ist und die Leistung fast 50% beträgt, blinkt die Betriebsanzeige alle 2 Sekunden. Wenn das Licht an ist und der Strom fast erschöpft ist, blinkt die Stromanzeige schnell.

ATR

Die automatische Temperaturengulierung (ATR) steuert die Ausgangsleistung der MH12GTS entsprechend den Bedingungen der Umgebung, um eine optimale Leistung zu gewährleisten.

Batteriewechsel / Aufladen der Akkus

Die Batterien sollten ausgetauscht oder die Akkus aufgeladen werden, wenn die Betriebsanzeige schnell blinkt, der Lichtkegel dunkel erscheint oder die Taschenlampe nicht mehr reagiert.

Wartung

Alle 6 Monate sollte das Gewinde mit einem sauberen Tuch abgewischt und anschließend mit einer dünnen Schicht Silikonfett geschmiert werden.

Allgemeine Hinweise

Altbatterien gehören nicht in den Hausmüll. Sie können gebrauchte Batterien unentgeltlich an unser Versandlager zurückgeben. Als Verbraucher sind Sie zur Rückgabe von Altbatterien gesetzlich verpflichtet.

(Francais) MH12GTS

Eclairage momentané

Appuyez sur l'interrupteur jusqu'à mi-course pour éclairer. Relâchez simplement pour éteindre

ON/OFF

Pour allumer : Pressez l'interrupteur jusqu'à entendre un clic.
Pour éteindre : Pressez une nouvelle fois l'interrupteur jusqu'à entendre un clic.
Note : la lampe possède une fonction mémoire. Quand elle est réactivée, elle revient au mode et niveau enregistré ou en mode stroboscope. (les modes SOS et Balise ne sont pas concernés).

Niveaux d'éclairage

Lorsque la lampe est allumée, appuyez plusieurs fois sur le bouton Mode pour naviguer entre les niveaux Très bas, Bas, Moyen , Fort, turbo.

Accès direct à Ultra low

Quand la lumière est allumée, maintenir appuyé le bouton mode, puis appuyer légèrement sur le bouton arrière et relâcher en même temps pour entre en mode ultralow .

Accès direct à Turbo


Quand la lumière est allumée, maintenir appuyé le bouton mode. Relâcher pour revenir au mode précédent.

Mode Spécial Stroboscope/SOS/Balise

Lorsque la lampe est allumée, appuyez sur le bouton Mode pendant plus d'une seconde pour accéder au mode Stroboscope.
Dans ce mode, appuyez à nouveau sur le bouton pendant plus d'une seconde pour naviguer entre les modes SOS, balise et stroboscope. Pour quitter ces modes et revenir au dernier niveau d'éclairage utilisé, appuyez simplement sur le bouton Mode à nouveau.


Charge

- La lampe MH12GTS est équipée d'un circuit de charge intelligent. Comme illustré, vissez à fond le capuchon arrière après avoir inséré la batterie, puis utilisez le câble USB pour connecter une alimentation externe (par exemple un adaptateur USB, un ordinateur ou d'autres périphériques de chargement USB) au port micro-USB situé sur l'arrière pour commencer le processus de charge.
- Lorsque l'état de charge est normal, le témoin de charge clignote lentement pour informer l'utilisateur.
 - Lorsque la batterie est terminée, MH12GTS interromp le processus et le témoin de charge reste allumé pour informer l'utilisateur.
 - Lorsque la charge ne fonctionne pas normalement (par exemple, la batterie est cassée / insérée de manière incorrecte), MH12GTS arrêtera le processus de charge et le témoin de charge clignotera rapidement pour informer l'utilisateur.
 - Le temps de charge pour une batterie Li-ion 18650 est d'environ 8 heures.

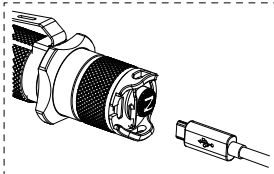

Batterie

- Lorsque la batterie est insérée, le voyant d'alimentation situé sous le bouton latéral clignote pour indiquer la tension de la batterie (± 0,1V). Par exemple, lorsque la tension de la batterie est à 4,2 V, le voyant d'alimentation clignote 4 fois, suivi d'une pause d'une seconde et de 2 autres clignotements. Différentes tensions représentent les niveaux de puissance restants de la batterie :

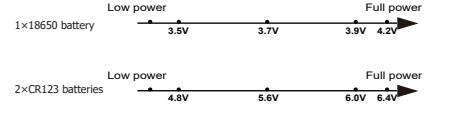

Note: lorsque vous utilisez deux CR123 / RCR123 en série, l'indicateur affiche la tension moyenne entre les deux batteries.

- Lorsque la lampe est éteinte et vous appuyez sur le bouton Mode, le témoin d'alimentation clignote pour indiquer la puissance restante:
 - 3 clignotements indiquent que la puissance est supérieure à 50%;
 - 2 clignotements indiquent que la puissance est inférieure à 50%;
 - 1 clignotement indique que la puissance est inférieure à 10%.
- Lorsque la lampe est allumée et que le niveau d'alimentation est proche de 50%, le voyant d'alimentation clignote toutes les 2 secondes pour informer l'utilisateur. Lorsque la lampe est allumée et que le courant est presque épuisé, le voyant d'alimentation clignote rapidement en continu pour informer l'utilisateur.

Système ATR

Le système avancé de régulation de la température (ATR) permet à la lampe d'ajuster de façon dynamique son niveau d'éclairage en fonction de sa température interne. Cela permet d'éviter toute surchauffe de la lampe et d'augmenter sa durée de vie.

Changement des batteries

Si la lampe ne répond plus ou si l'intensité d'éclairage diminue, si l'indicateur lumineux clignote rapidement, merci de recharger les batteries .

Maintenance

Tous les six mois, le filetage doit être essuyé avec un chiffon propre et recouvert d'un lubrifiant à base de silicone.

